User's Guide LM3477 Buck Controller Evaluation Module User's Guide

TEXAS INSTRUMENTS

Table of Contents

1 Introduction	2
2 Performance	
3 Hysteretic Mode	
4 Increasing Current Limit	
5 Layout Fundamentals	6
6 Revision History	

Trademarks

All trademarks are the property of their respective owners.



1 Introduction

The LM3477 is a current mode, high-side N channel FET controller. It is most commonly used in buck configurations, as shown in Figure 1-1. All the power conducting components of the circuit are external to the LM3477, so a large variety of inputs, outputs, and loads can be accommodated by the LM3477.

The LM3477 evaluation board comes ready to operate at the following conditions:

- $4.5 \text{ V} \le \text{V}_{\text{IN}} \le 15 \text{ V}$
- V_{OUT} = 3.3 V
- 0 A \leq I_{OUT} \leq 1.6 A

The circuit and BOM for this application are given in Figure 1-1 and Table 1-1.

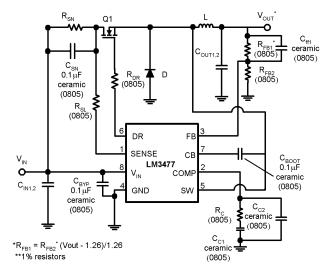


Figure 1-1. LM3477 Buck Converter



Component	Value	Part Number
C _{IN1}	120 µF/20 V	594D127X0020R2
C _{IN2}	No connect	
C _{OUT1}	22 µF/10 V	LMK432BJ226MM (Taiyo Yuden)
C _{OUT2}	22 µF/10 V	LMK432BJ226MM (Taiyo Yuden)
L	10 µH, 3.8 A	DO3316P-103 (Coilcraft)
R _C	1.8 kΩ	CRCW08051821FRT1 (Vitramon)
C _{C1}	12 nF/50 V	VJ0805Y123KXAAT (Vitramon)
C _{C2}	No connect	
Q1	5 A, 30 V	IRLMS2002 (IRF)
D	100 V, 3 A	MBRS340T3 (Motorola)
R _{DR}	20 Ω	CRCW080520R0FRT1 (Vitramon)
R _{SL}	1 kΩ	CRCW08051001FRT1 (Vitramon)
R _{FB1}	16.2 kΩ	CRCW08051622FRT1 (Vitramon)
R _{FB2}	10.0 kΩ	CRCW08051002FRT1 (Vitramon)
C _{FF}	470 pF	VJ0805Y471KXAAT (Vitramony)
R _{SN}	0.03 Ω	WSL 2512 0.03 Ω ±1% (Dale)

2 Performance

Figure 2-1 to Figure 2-2 show some benchmark data taken from the circuit above on the LM3477 evaluation board. This evaluation board can also be used to evaluate a buck regulator circuit optimized for a different operating point or to evaluate a trade-off between cost and some performance parameter. For example, the conversion efficiency can be increased by using a lower $R_{DS(ON)}$ MOSFET, ripple voltage can be lowered with lower ESR output capacitors, and the hysteretic threshold can be changed as a function of the R_{SN} and R_{SL} resistors.

The conversion efficiency can be increased by using a lower $R_{DS(ON)}$ MOSFET, however, it drops as input voltage increases. The efficiency reduces because of increased diode conduction time and increased switching losses. Switching losses are due to the Vds × Id transition losses and to the gate charge losses, both of which can be lowered by using a FET with low gate capacitance. At low duty cycles, where most of the power loss in the FET is from the switching losses, trading off higher $R_{DS(ON)}$ for lower gate capacitance will increase efficiency.

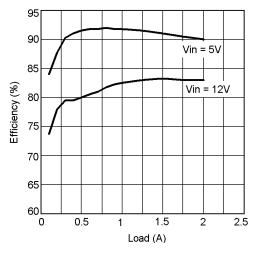


Figure 2-1. Efficiency vs Load V_{OUT} = 3.3 V

3




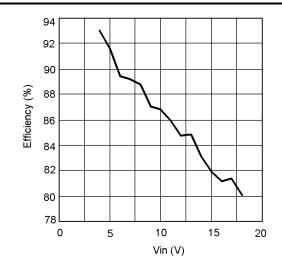


Figure 2-2. Efficiency vs V_{IN} V_{OUT} = 3.3 V, I_{OUT} = 2 A

Figure 3-1 shows a bode plot of LM3477 open loop frequency response using the external components listed in Table 1-1.

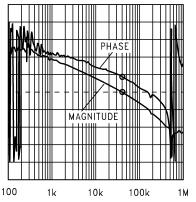

Magnitude = 20 dB/Decade, Bandwidth = 39.8 kHz, Phase = 45°/Decade, Phase Margin = 41°

Figure 2-3. Open Loop Frequency Response V_{IN} = 5 V, V_{OUT} = 3.3 V, I_{OUT} = 1.5 A

3 Hysteretic Mode

As the load current is decreased, the LM3477 will eventually enter a 'hysteretic' mode of operation. When the load current drops below the hysteretic mode threshold, the output voltage rises slightly. The overvoltage protection (OVP) comparator senses this rise and causes the power MOSFET to shut off. As the load pulls current out of the output capacitor, the output voltage drops until it hits the low threshold of the OVP comparator and the part begins switching again. This behavior results in a lower frequency, higher peak-to-peak output voltage ripple than with the normal pulse width modulation scheme. The magnitude of the output voltage ripple is determined by the OVP threshold levels, which are referred to the feedback voltage and are typically 1.25 V to 1.31 V. For more information, see the *Electrical Characteristics* table in the *LM3477 High Efficiency High-Side N-Channel Controller for Switching Regulator Data Sheet*. In the case of a 3.3-V output, this translates to a regulated output voltage between 3.27 V and 3.43 V. The hysteretic mode threshold point is a function of R_{SN} and R_{SL}. Figure 3-1 shows the hysteretic threshold versus V_{IN} for the LM3477 evaluation board with and without R_{SL}.



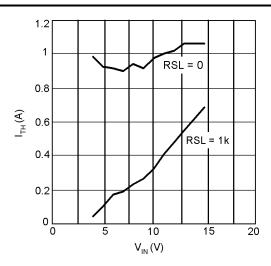


Figure 3-1. I_{TH} vs V_{IN}

4 Increasing Current Limit

The R_{SL} resistor offers flexibility in choosing the ramp of the slope compensation. Slope compensation affects the minimum inductance for stability (see the *Slope Compensation* section in the *LM3477 High Efficiency High-Side N-Channel Controller for Switching Regulator Data Sheet*), but also helps determine the current limit and hysteretic threshold. As an example, R_{SL} can be disconnected and replaced by a 0- Ω resistor so that no extra slope compensation is added to the current sense waveform to increase the current limit. A more conventional way to adjust the current limit is to change R_{SN}. R_{SL} is used here to change current limit for the sake of simplicity and to demonstrate the dependence of current limit to R_{SL}. By changing R_{SL} to 0 Ω , the following conditions can be met:


 $4.5 \text{ V} \le \text{V}_{\text{IN}} \le 15 \text{ V}$

V_{OUT} = 3.3 V

 $0 A \le I_{OUT} \le 3 A$

The current limit is a weak function of slope compensation and a strong function of the sense resistor. By decreasing R_{SL} , slope compensation is decreased, and as a result the current limit increases. The hysteretic mode threshold will also increase to about 1 A (see Figure 3-1).

Figure 4-1 shows a bode plot of LM3477 open loop frequency response using the modified ($R_{SL} = 0 \Omega$) components to achieve higher output current capability.

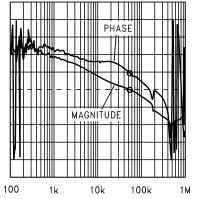

Magnitude = 20 dB/Decade, Bandwidth = 55.3 kHz, Phase = 45°/Decade, Phase Margin = 42°

Figure 4-1. Open Loop Frequency Response V_{IN} = 5 V, V_{OUT} = 3.3 V, I_{OUT} = 3 A

5



5 Layout Fundamentals

Good layout for DC-DC converters can be implemented by following a few simple design guidelines:

- 1. Place the power components (catch diode, inductor, and filter capacitors) close together. Make the traces between them short.
- 2. Use wide traces between the power components and for power connections to the DC-DC converter circuit.
- 3. Connect the ground pins of the input and output filter capacitors and catch diode as close as possible using generous component-side copper fill as a pseudo-ground plane. Then, connect this to the ground-plane with several vias.
- 4. Arrange the power components so that the switching current loops curl in the same direction.
- 5. Route high-frequency power and ground return as direct continuous parallel paths.
- 6. Separate noise sensitive traces, such as the voltage feedback path, from noisy traces associated with the power components.
- 7. Ensure a good low-impedance ground for the converter IC.
- 8. Place the supporting components for the converter IC, such as compensation, frequency selection and charge-pump components, as close to the converter IC as possible but away from noisy traces and the power components. Make their connections to the converter IC and its pseudo-ground plane as short as possible.
- 9. Place noise sensitive circuitry, such as radio-modem IF blocks, away from the DC-DC converter, CMOS digital blocks, and other noisy circuitry.

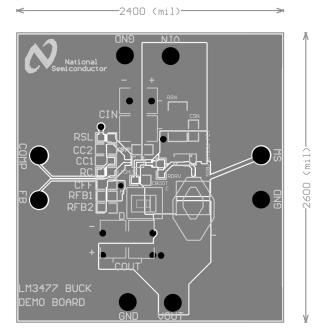


Figure 5-1. LM3477 Evaluation Board PCB Layout (Top Side)



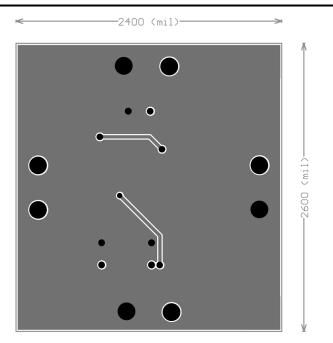


Figure 5-2. LM3477 Evaluation Board PCB Layout (Bottom Side)

6 Revision History

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

С	hanges from Revision E (April 2013) to Revision F (February 2022)	Page
•	Updated the numbering format for tables, figures, and cross-references throughout the document	2
•	Updated the updated user's guide title	2

7

IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATA SHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to TI's Terms of Sale or other applicable terms available either on ti.com or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

TI objects to and rejects any additional or different terms you may have proposed.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2022, Texas Instruments Incorporated