

# ***ADS8342EVM***

## *User's Guide*

## IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Following are URLs where you can obtain information on other Texas Instruments products & application solutions:

<b>Products</b>		<b>Applications</b>	
Amplifiers	<a href="http://amplifier.ti.com">amplifier.ti.com</a>	Audio	<a href="http://www.ti.com/audio">www.ti.com/audio</a>
Data Converters	<a href="http://dataconverter.ti.com">dataconverter.ti.com</a>	Automotive	<a href="http://www.ti.com/automotive">www.ti.com/automotive</a>
DSP	<a href="http://dsp.ti.com">dsp.ti.com</a>	Broadband	<a href="http://www.ti.com/broadband">www.ti.com/broadband</a>
Interface	<a href="http://interface.ti.com">interface.ti.com</a>	Digital Control	<a href="http://www.ti.com/digitalcontrol">www.ti.com/digitalcontrol</a>
Logic	<a href="http://logic.ti.com">logic.ti.com</a>	Military	<a href="http://www.ti.com/military">www.ti.com/military</a>
Power Mgmt	<a href="http://power.ti.com">power.ti.com</a>	Optical Networking	<a href="http://www.ti.com/opticalnetwork">www.ti.com/opticalnetwork</a>
Microcontrollers	<a href="http://microcontroller.ti.com">microcontroller.ti.com</a>	Security	<a href="http://www.ti.com/security">www.ti.com/security</a>
		Telephony	<a href="http://www.ti.com/telephony">www.ti.com/telephony</a>
		Video & Imaging	<a href="http://www.ti.com/video">www.ti.com/video</a>
		Wireless	<a href="http://www.ti.com/wireless">www.ti.com/wireless</a>

Mailing Address: Texas Instruments  
Post Office Box 655303 Dallas, Texas 75265

## EVM IMPORTANT NOTICE

Texas Instruments (TI) provides the enclosed product(s) under the following conditions:

This evaluation kit being sold by TI is intended for use for **ENGINEERING DEVELOPMENT OR EVALUATION PURPOSES ONLY** and is not considered by TI to be fit for commercial use. As such, the goods being provided may not be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including product safety measures typically found in the end product incorporating the goods. As a prototype, this product does not fall within the scope of the European Union directive on electromagnetic compatibility and therefore may not meet the technical requirements of the directive.

Should this evaluation kit not meet the specifications indicated in the EVM User's Guide, the kit may be returned within 30 days from the date of delivery for a full refund. **THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.**

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user indemnifies TI from all claims arising from the handling or use of the goods. Please be aware that the products received may not be regulatory compliant or agency certified (FCC, UL, CE, etc.). Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge.

**EXCEPT TO THE EXTENT OF THE INDEMNITY SET FORTH ABOVE, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.**

TI currently deals with a variety of customers for products, and therefore our arrangement with the user **is not exclusive**.

TI assumes **no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein**.

Please read the EVM User's Guide and, specifically, the EVM Warnings and Restrictions notice in the EVM User's Guide prior to handling the product. This notice contains important safety information about temperatures and voltages. For further safety concerns, please contact the TI application engineer.

Persons handling the product must have electronics training and observe good laboratory practice standards.

No license is granted under any patent right or other intellectual property right of TI covering or relating to any machine, process, or combination in which such TI products or services might be or are used.

Mailing Address:

Texas Instruments  
Post Office Box 655303  
Dallas, Texas 75265

## **EVM WARNINGS AND RESTRICTIONS**

It is important to operate this EVM within the input voltage range of 1.8 VDC to 5 VDC and the output voltage range of 0-5 VDC.

Exceeding the specified input range may cause unexpected operation and/or irreversible damage to the EVM. If there are questions concerning the input range, please contact a TI field representative prior to connecting the input power.

Applying loads outside of the specified output range may result in unintended operation and/or possible permanent damage to the EVM. Please consult the EVM User's Guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative.

During normal operation, some circuit components may have case temperatures greater than 30°C. The EVM is designed to operate properly with certain components above 85°C as long as the input and output ranges are maintained. These components include but are not limited to linear regulators, switching transistors, pass transistors, and current sense resistors. These types of devices can be identified using the EVM schematic located in the EVM User's Guide. When placing measurement probes near these devices during operation, please be aware that these devices may be very warm to the touch.

### **Mailing Address:**

Texas Instruments  
Post Office Box 655303  
Dallas, Texas 75265

# Read This First

---

---

---

### ***About This Manual***

This users guide describes the characteristics, operation, and use of the ADS8342 Modular EVM. A complete circuit description as well as schematic diagram is included.

### ***How to Use This Manual***

This document contains the following chapters:

- Section 1 – EVM Overview
- Section 2 – Analog Interface
- Section 3 – Digital Interface
- Section 4 – Power Supply Options
- Section 5 – EVM Operation
- Section 6 – ADS8342 Modular EVM BOM and Schematic

### ***Related Documentation From Texas Instruments***

To obtain a copy of any of the following TI documents, call the Texas Instruments Literature Response Center at (800) 477-8924 or the Product Information Center (PIC) at (972) 644-5580. When ordering, please identify this booklet by its title and literature number. Updated documents can also be obtained through our website at [www.ti.com](http://www.ti.com).

<b>Data Sheets:</b>	<b>Literature Number:</b>
ADS8342	SBAS277
<b>Application Notes/ Additional Literature from Texas Instruments:</b>	<b>Literature Number:</b>
Op Amps for Everyone	SL0D006
5-6K Interface Board	SLAU104
Single and Bipolar Supply Signal Conditioning Boards	SLAU105
Controlling the ADS8342 with TMS320 Series DSP's	SLAU176
<b>Third Party Tools:</b>	<b>Vendor Website:</b>
HPA449 Development Board (MSP430 Tools)	<a href="http://www.softbaugh.com">www.softbaugh.com</a>

***FCC Warning***

This equipment is intended for use in a laboratory test environment only. It generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to subpart J of part 15 of FCC rules, which are designed to provide reasonable protection against radio frequency interference. Operation of this equipment in other environments may cause interference with radio communications, in which case the user at his own expense will be required to take whatever measures may be required to correct this interference.

***Trademarks***

The TI Logo are trademarks of Texas Instruments Incorporated.

# Contents

---

---

---

<b>1</b>	<b>EVM Overview</b> .....	<b>1-1</b>
1.1	Features .....	1-2
1.2	Introduction .....	1-2
<b>2</b>	<b>Analog Interface</b> .....	<b>2-1</b>
<b>3</b>	<b>Digital Interface</b> .....	<b>3-1</b>
3.1	Conversion Clock and BYTE Control .....	3-2
3.2	Parallel Control .....	3-2
3.3	Parallel Data .....	3-2
<b>4</b>	<b>Power Supply Options</b> .....	<b>4-1</b>
<b>5</b>	<b>EVM Operation</b> .....	<b>5-1</b>
<b>6</b>	<b>ADS8342 Modular EVM BOM and Schematic</b> .....	<b>6-1</b>
6.1	Bill of Materials .....	6-2
6.2	Schematic .....	6-3



# **EVM Overview**



This chapter contains the features and introduction.

<b>Topic</b>	<b>Page</b>
1.1 <b>Features</b> .....	1-2
1.2 <b>Introduction</b> .....	1-2

## 1.1 Features

- Four true bipolar inputs
- High speed parallel interface
- Direct operation with a variety of DSK platforms from Texas Instruments

## 1.2 Introduction

The ADS8342 modular EVM is a platform for evaluation of all operating modes of the ADS8342. It provides a buffered parallel data output and an on-board analog front end (AFE) circuit as an example of a typical input configuration. Jumpers located on the EVM provide static control over the CLKDIV and BYTE pins.

The new modular EVM form factor allows for direct evaluation of the ADC's performance and operating characteristics with a variety of host processors. This EVM is compatible with the 5-6K interface board (SLAU104) from Texas Instruments, as well as the HPA449 development board from SoftBaugh, Inc. ([www.softbaugh.com](http://www.softbaugh.com)).

## Analog Interface

---

---

---

---

The ADS8342 modular EVM easily interfaces to multiple analog sources. Samtec part numbers SSW-110-22-F-D-VS-K and TSM-110-01-T-DV-P provide a convenient 10-pin dual row header/socket combination at J1. Connector J1 and jumpers W1 through W4 provide access to the ADS8342 analog input pins. Analog signals applied to J1 are fed directly to the data converter when shunts are placed on pins 1-2 of W1–W4.

When using the onboard AFE, a single analog input can be applied to any of the four input channels by moving the shunt on W1–W4 to cover pins 2-3. The SMA connector labeled INPUT applies the signal to be converted to the AFE.

The AFE consists of a single channel OPA726 op amp at U2. Gain and filter configurations can be modified as necessary by using the pin sockets installed at resistor and capacitor locations R9–R12, C21 and C27.



# Digital Interface

---

---

---

---

The following section describes the ADS8342 EVM digital interface. Topics include the jumper configuration for byte and conversion-clock division ratio, the parallel data interface and the parallel control signals A0, A1,  $\overline{RD}$ ,  $\overline{CS}$ , and CONVST.

<b>Topic</b>	<b>Page</b>
<b>2.1 Conversion Clock and BYTE Control .....</b>	<b>2-2</b>
<b>2.2 Parallel Control .....</b>	<b>2-2</b>
<b>2.3 Parallel Data .....</b>	<b>2-2</b>

### 3.1 Conversion Clock and BYTE Control

Jumpers W5–W7 control the clock divide and parallel data format of the ADS8342. W6 and W7 connect to CLKDIV0 and CLKDIV1 respectively and perform the following actions:

Jumper		Action
W6	W7	
open	open	External conversion clock (20MHz MAX) divided by 8
open	closed	External conversion clock (20MHz MAX) divided by 4
closed	open	External conversion clock (10MHz MAX) divided by 2
closed	closed	External conversion clock (5MHz MAX) divided by 1

Jumper W5 controls the BYTE pin of the ADS8342. When closed, the ADS8342 operates in 16 bit output or *word* mode. When open, the ADS8342 operates in *BYTE* mode and data is accessed by reading D0-D7 twice.

### 3.2 Parallel Control

The ADS8342 modular EVM interfaces to multiple control platforms. Samtec part numbers SSW-110-22-F-D-VS-K and TSM-110-01-T-DV-P provide a 10-pin dual-row header/socket combination at J4. This header/socket combination provides access to the  $\overline{RD}$ ,  $\overline{CONVST}$ , and clock pins of the ADS8342.

Signal	Description
J4.1 DC_CSa	Daughter card chip select—active low signal used to access the EVM
J4.3 $\overline{WR}$	Processor write strobe—active low signal used to initiate a conversion
J4.5 $\overline{RD}$	Processor read strobe—active low signal used to access parallel data
J4.7 EVM_A0	EVM address line 0—used in conjunction with EVM_A1 to chip select the ADS8342
J4.9 EVM_A1	EVM address line 1—used in conjunction with EVM_A0 to chip select the ADS8342
J4.11 EVM_A2	EVM address line 2—connects to the ADS8342 A1 pin, controls channel read
J4.13 EVM_A3	EVM address line 3—connects to the ADS8342 A1 pin, controls channel read
J4.15 EVM_A4	EVM address line 4—not used
J4.17 TOUT	Processor timer output—optional conversion clock source
J4.19 INT	Processor interrupt input—connects to the ADS8342 BUSY pin

### 3.3 Parallel Data

The ADS8342 modular EVM uses Samtec part numbers SSW-116-22-F-D-VS-K and TSM-116-01-T-DV-P to provide a 16-pin dual-row header/socket combination at J3. This header/socket combination provides access to the parallel data pins of the ADS8342. Data line D0 is connected to J3 pin 1. Data lines 1-15 are located on odd-numbered pins 3-31 respectively. Even-numbered pins 2-32 are connected to digital ground.

## Power Supply Options

The ADS8342 modular EVM board requires  $\pm 5$  VDC for the ADS8342 circuit. Positive 3.3 VDC is required for the digital circuitry found on the EVM. Power to the EVM is applied to the 10-pin dual-row header/socket combination of J2. When used in combination with one of the DAP Interface boards, the socket portion of J2 (bottom side of the PWB) provides connection to the common power bus described in document SLAU104. The pin portion may be used to allow stacking of future DAC boards, or as a convenient point to apply external power supplies in stand-alone operation. The following table shows the pin out of J2.

Signal	Pin Number		Signal
Unused	1	2	Unused
+5VA	3	4	Unused
DGND	5	6	AGND
Unused	7	8	Unused
+3.3VD	9	10	+5VD

**Note:** While filters are provided for all power supply inputs, optimal performance of the EVM requires a clean, well-regulated power source.



# EVM Operation

---

---

---

---

The analog input source for channels AIN0–AIN3 is applied directly to connector J1, pins 2, 4, 6, or 8 (top or bottom side) or through the onboard AFE via the SMA connector labeled INPUT. When using the AFE circuit, resistors R9, R10, R11 and R12 as well as capacitors C21 and C27 provide customizable filtering of the input signal. J1 or AFE inputs are selected through jumpers W1–W4. For J1 use, shunts must be installed at pins 1-2.

The digital control signals are applied directly to J4 (top or bottom side). The ADS8342 modular EVM can also be connected directly to a DSP, microcontroller, or FPGA interface board. If an external conversion clock is required, the clock is applied to the SMA connector labeled EXT CLK in accordance with the clock division factor (see table in Section 3.1).

The ADS8342 EVM is designed for use with the 5-6K interface board. Conversions are initiated by writing to the external DSP data bus at an address determined by jumper settings on the EVM and interface board.

With a proper conversion clock applied the EVM, the ADC responds to a /CONVST signal (via the processor /WR strobe) and provides the host with an interrupt via J4 pin 19. The host must then access data from channel A0 through A3 by reading from the appropriate address (see SLAU104 and SLAA176 for details). When operating in BYTE mode, two successive reads from the selected analog input channel are required to obtain a full 16 bit data transfer.

The following table shows the default jumper locations of the ADS8364 EVM:

Jumper	Default Position	Function
W1 W2 W3 W4	1-2	1-2: AINx samples analog signal applied at J1 2-3: AINx samples signal from analog front end (U2)
W5	Closed	Closed: BYTE pin of ADS8342 pulled low Open: BYTE pin of ADS8342 pulled high
W6	Closed	Closed: CLKDIV0 pin of ADS8342 pulled low (See Section 3.1) Open: CLKDIV0 pin of ADS8342 pulled high
W7	Closed	Closed: CLKDIV1 pin of ADS8342 pulled low (See Section 3.1) Open: CLKDIV1 pin of ADS8342 pulled high
W8	2-3	1-2: CLK is driven by an external clock EXT CLK buffered by U6 2-3: CLK is driven by TOUT signal from J4
W9	1-2	1-2: Digital output buffer U3 is enabled by DC_CSa signal applied at J4 2-3: Digital output buffer U3 is enabled by RD and the decoded address from U7 (See W11)
W10	1-2	1-2: U2 - input driven by signal applied to analog INPUT SMA_J connector 2-3: U2 - input connected to ground
W11	5-6	Address decode select 1-2: 3 3-4: 2 5-6: 1 7-8: 0
W12	2-3	1-2: U2 + input driven by signal applied to analog INPUT SMA_J connector 2-3: U2 + input connected to ground

# **ADS8342 Modular EVM BOM and Schematic**

---

---

---

---

This chapter contains the ADS8342 modular EVM bill of materials and the schematic.

<b>Topic</b>	<b>Page</b>
<b>6.1 Bill of Materials</b> .....	<b>6-2</b>
<b>6.2 Schematics</b> .....	<b>6-3</b>

## 6.1 Bill of Materials







The following table contains a complete bill of materials for the ADS8342 modular EVM board. The schematic diagram is also provided for reference.

Designators	Description	Manufacturer	Mfg. Part Number
C1-C4 C7 C9 C13 C14 C16-C18 C20 C22 C23	0.1 $\mu$ F, 1206, ceramic, X7R, 50 V, 10%	AVX Corp.	12065C104KAT2A
C5 C6 C8 C10 C15 C19	4.7 $\mu$ F, A case, tantalum, 16 V, 10%	Panasonic	T491A475K016AS
C11	220 $\mu$ F, 10 V tantalum, 10%	AVX Corp.	TAP227K010CCS
C24-C26	10 $\mu$ F, C case, tantalum, 20 V, 20%	Panasonic	ECS-T1DC106R
F1-F3	EMI filters	Panasonic	EXC-EMT222DT
J1 J4 (top side)	10 Pin, dual row, SMT header (20 Pos.)	Samtec	TSM-110-01-T-DV-P
J1 J4 (bottom side)	10 Pin, dual row, SMT socket (20 Pos.)	Samtec	SSW-110-22-F-D-VS-K
J3 (top side)	16 Pin, dual row, SMT header (32 Pos.)	Samtec	TSM-116-01-T-DV-P
J3 (bottom side)	16 Pin, dual row, SMT socket (32 Pos.)	Samtec	SSW-116-22-F-D-VS-K
INPUT EXT CLK	SMA connector	Lighthouse Tech	LTI-SASF54GT
J2 (top side)	5 Pin, dual row, SMT header (10 Pos.)	Samtec	TSM-105-01-T-DV-P
J2 (bottom side)	5 Pin, dual row, SMT socket (10 Pos.)	Samtec	SSW-105-22-F-D-VS-K
R1	24.9 k $\Omega$ , 1206, 1%	Yageo America	9C12063A2492FKHFT
R5 R6	100 $\Omega$ , 1206, 5%	Yageo America	9C12063A1000JLHFT
R8	20 k $\Omega$ , 1206, 1%	Yageo America	9C12063A2002FKHFT
R14-R16 R25 R26	10 k $\Omega$ , 1206, 5%	Yageo America	9C12063A1002JLHFT
R2 R27-R30	1 k $\Omega$ , 1206, 5%	Yageo America	9C12063A1001JLHFT
R3 R7 R13 R17-R24	10 $\Omega$ , 1206, 5%	Yageo America	9C12063A10R0JLHFT
CLK	Red test point loop	Keystone	5000K
U1	REF1004 - 25	Texas Instruments	REF1004C-2.5
U2	OPA726	Texas Instruments	OPA726AID
U3	SN74LVCH16244	Texas Instruments	SN74LVCH16244ADL
U4 U5	SN74LVC125A	Texas Instruments	SN74LVC125AD
U6	SN74LVC1G17	Texas Instruments	SN74LVC1G17DBVR
DUT	ADS8342	Texas Instruments	ADS8342IBPFBT
U7	SN74LVC138A	Texas Instruments	SN74LVC138AD
W5-W7	2 Pin , 0.1" Header	Samtec	TSW-102-07-L-S
W11	4 Pin, dual row, TH header (8 Pos.)	Samtec	TSW-104-07-L-D
W1-W4 W8-W10 W12	3 Pin , 0.1" header	Samtec	TSW-103-07-L-S
<b>User selectable components</b>			
R9 R10	100 $\Omega$ , Axial, 0.25 W, 1%	Yageo America	MFR-25FRF-100K
R11 R12	10 $\Omega$ , Axial, 0.25 W, 1%	Yageo America	MFR-25FRF-10R0
C21 C27	0.1 $\mu$ F, Axial, X7R	Kemet	C320C104K5R5CA

## 6.2 Schematic

The ADS8342 modular EVM schematic is on the following page.

REVISIONS			
REV	DATE	DCR #	DESCRIPTION

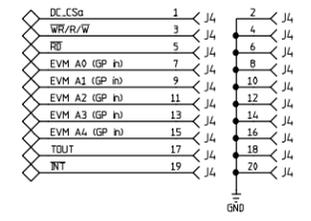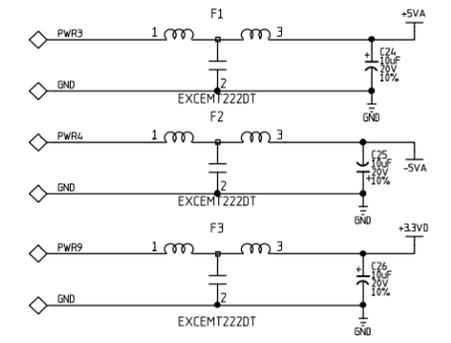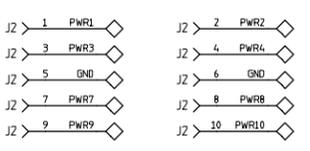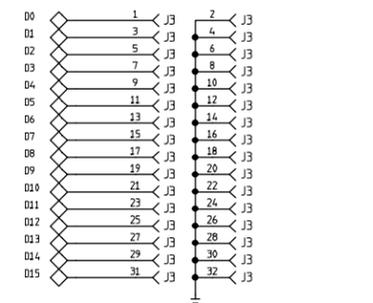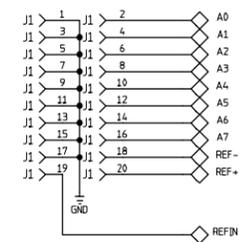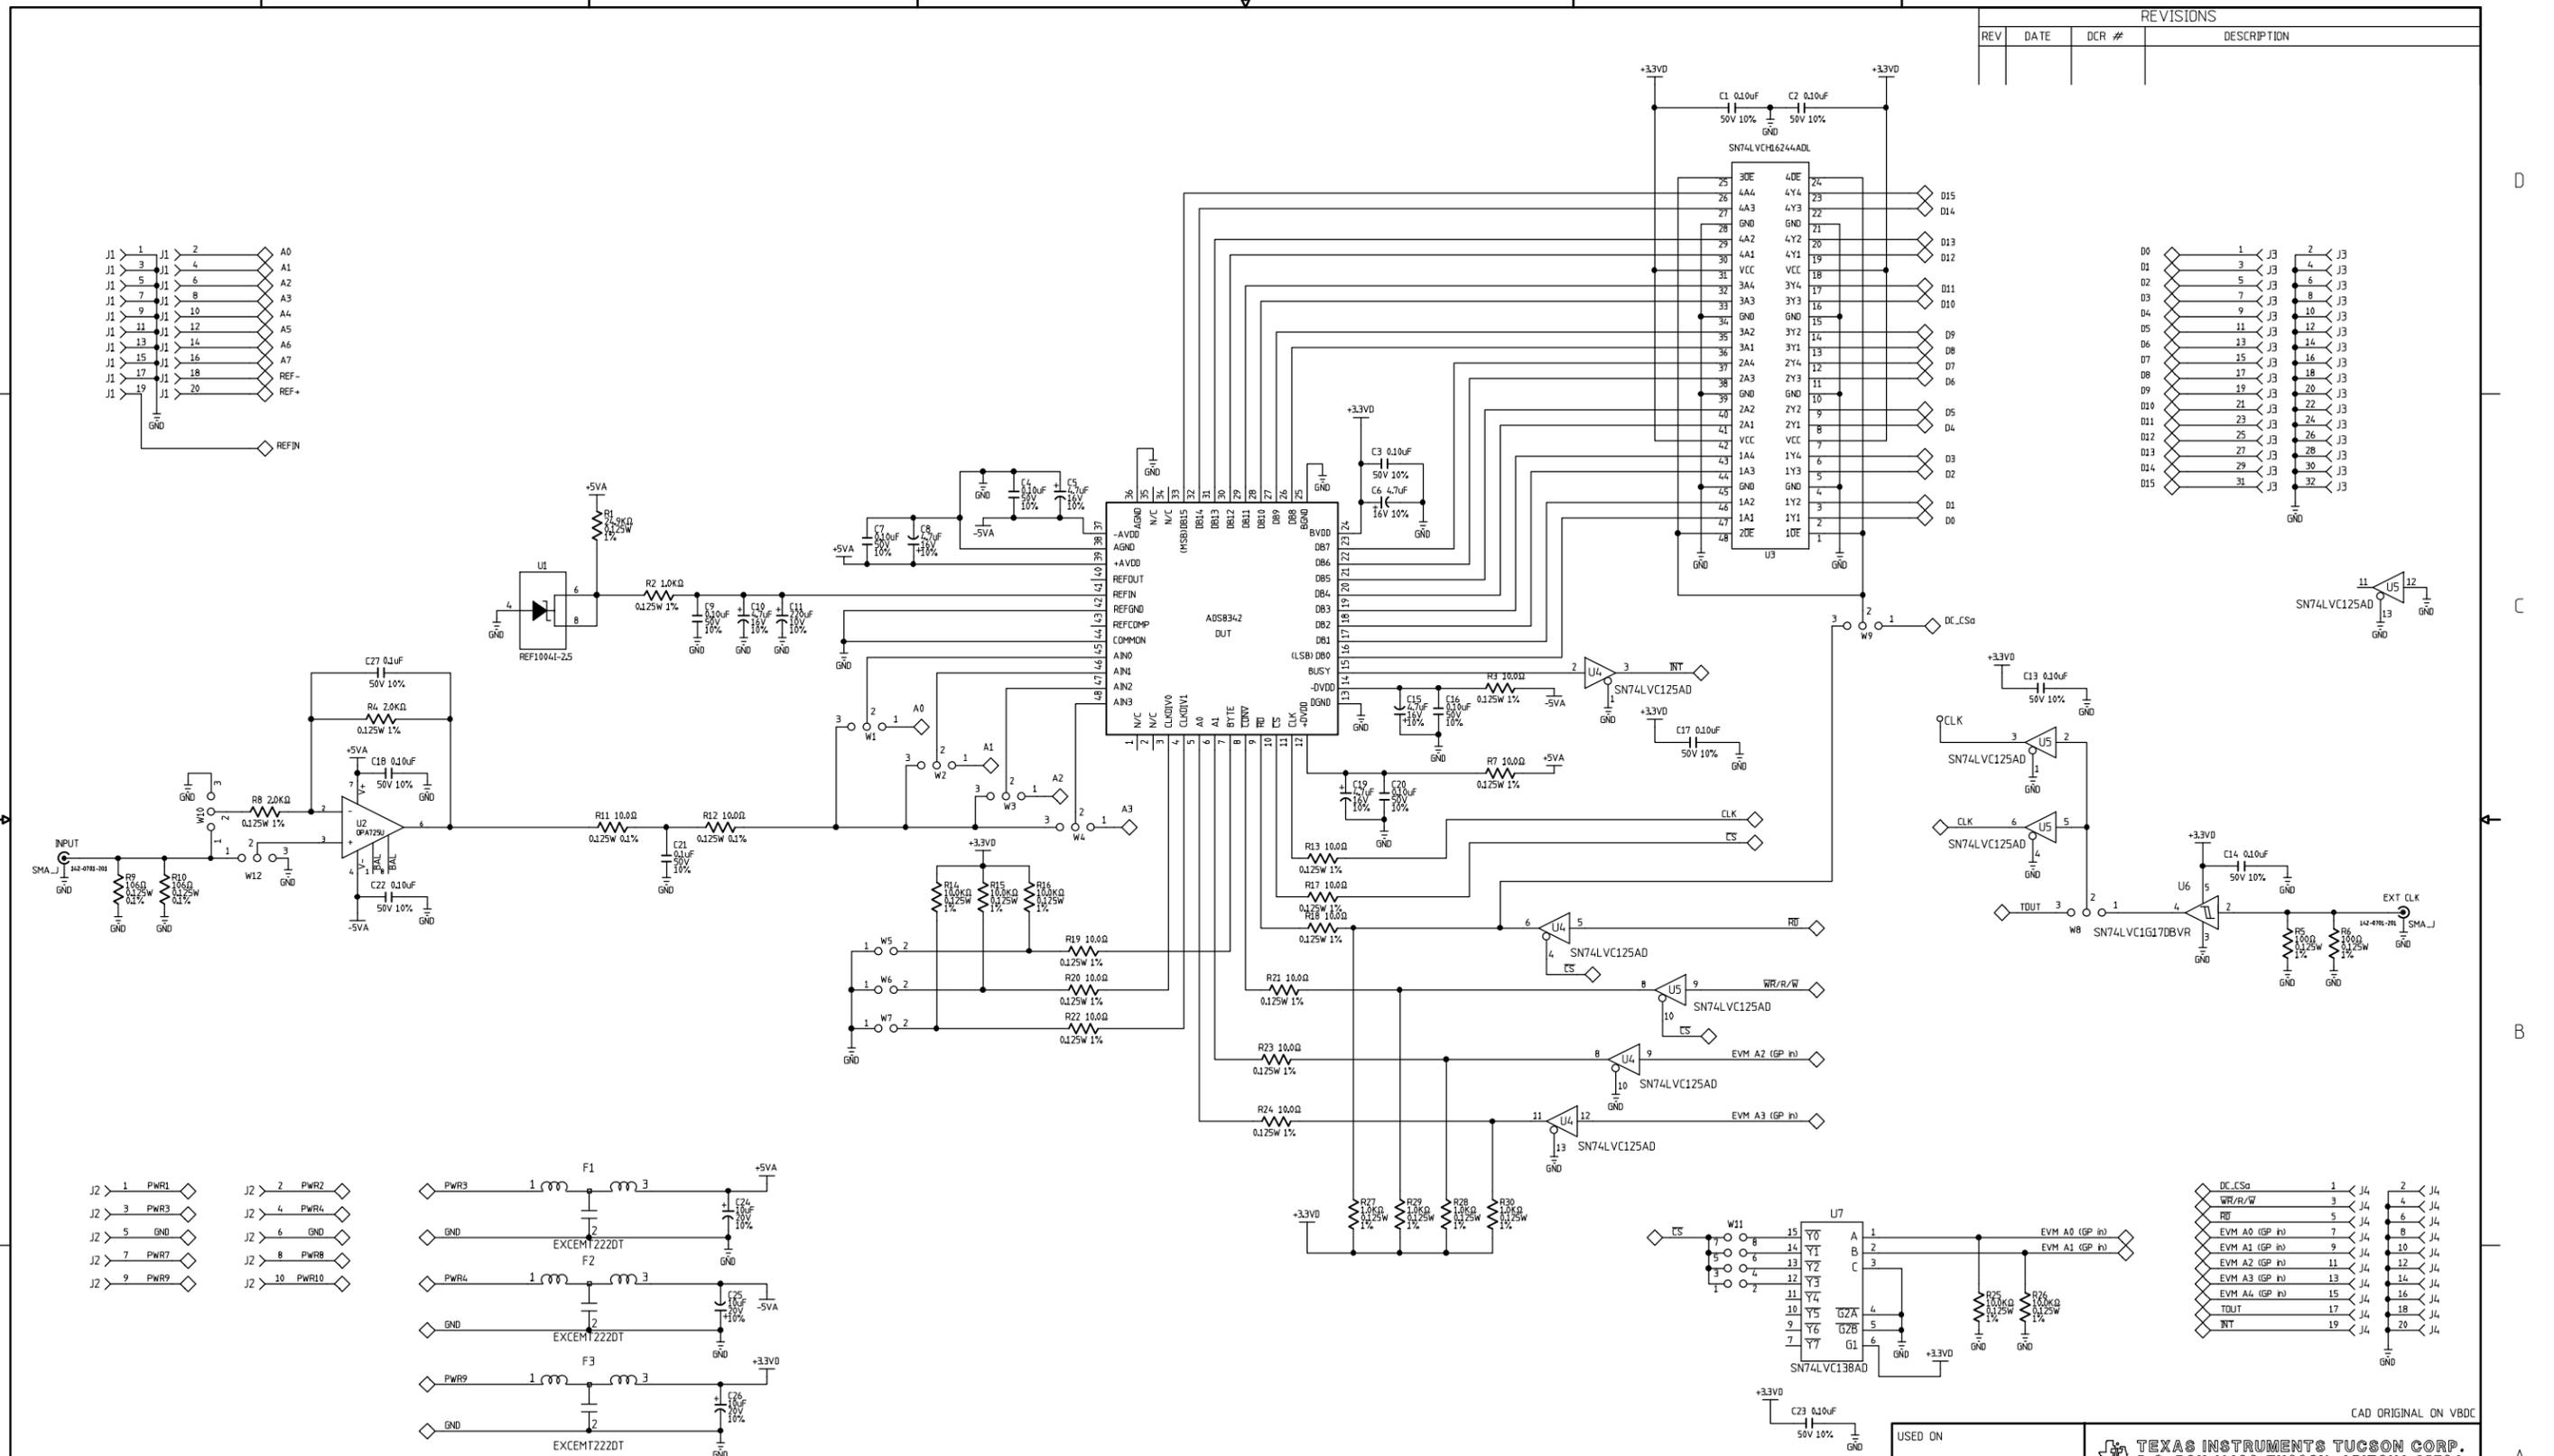

ANY SPECIFICATIONS, DRAWINGS OR REPRINTS, OR DATA FURNISHED TO BIDDER OR SELLER SHALL REMAIN TEXAS INSTRUMENTS TUCSON CORPORATION'S PROPERTY. SHALL BE KEPT CONFIDENTIAL SHALL BE USED ONLY FOR THE PURPOSE OF COMPLYING WITH TEXAS INSTRUMENTS TUCSON CORPORATION QUOTATION OR WITH TEXAS INSTRUMENTS TUCSON CORPORATION PURCHASER ORDERS, SHALL NOT BE DISCLOSED TO THIRD PARTIES, AND SHALL BE RETURNED AT TEXAS INSTRUMENTS TUCSON CORPORATION'S REQUEST. PATENT RIGHTS EMBODIED IN DESIGN, TOOLS, PATTERNS, DRAWINGS, DEVICES, INFORMATION AND EQUIPMENT SUPPLIED BY TEXAS INSTRUMENTS TUCSON CORPORATION PURSUANT TO THIS REQUEST FOR QUOTATION OR PURCHASE ORDER AND EXCLUSIVE RIGHTS FOR THE USE IN REPRODUCTION THEREOF ARE RESERVED BY TEXAS INSTRUMENTS TUCSON CORPORATION.

USED ON		TEXAS INSTRUMENTS TUCSON CORP.	
CONTRACT NO.		P.O. BOX 11400-TUCSON, ARIZONA 85734	
APPROVALS	DATE	ADS8342 Evaluation Board	
DRAWN Michael Snedeker			
CHECKED			
ISSUED		SIZE D	CAGE CODE 13919
		DWG. NO.	REV A
SCALE:		SHEET	

CAD ORIGINAL ON VBDC