

Ultrasonic Sensing Basics for Liquid Level Sensing, Flow Sensing, and Fluid Identification Applications

AmyLe

ABSTRACT

The need for accurate and reliable sensors is growing in so many markets around the world, such as industrial and manufacturing, automotive, medical, energy, and smart grid applications. The designers and end-users of these sensors are counting on newer technologies that use less power and deliver higher accuracy -- technologies that will eliminate moving parts and allow sensing in remote locations and in less-than-ideal conditions.

One of the most effective areas of sensor technology is ultrasonic, the science that measures the time interval between an ultrasonic signal that is sent and received, or what is commonly referred to as "time-of-flight" (TOF). TI is leveraging its ultrasonic expertise to deliver new signal conditioning solutions to fluid level sensing, fluid identification, flow metering, and distance sensing customers with its latest products (TDC1000 and TDC7200) based on time-to-digital converters (TDCs).

This application note provides an introduction to how Texas Instruments Ultrasonic Sensing solutions (TDC1000 and TDC7200) can be applied to popular applications such as liquid level sensing, flow sensing, and fluid identification.

Topic	Page
1 General Theory of How Ultrasonic Sensing Works.....	2
2 TDC1000: Ultrasonic Analog-Front-End and TDC7200: Time-to-Digital Converter	3
3 Application No. 1: Fluid Level.....	5
4 Application No. 2: Fluid Identification / Concentration.....	6
5 Application No. 3: Flow Meter.....	7
6 Application No. 4: Distance/Proximity Sensing.....	8
7 Conclusion.....	8

1 General Theory of How Ultrasonic Sensing Works

For single transducer in fluid level, fluid identification, and distance applications, the TDC1000 AFE excites the sensor and detects the echo once it returns, as shown in Figure 1. The AFE excites the transducer by hitting it with a series of pulses and with frequencies in the range of kHz to MHz. The TDC1000 allows a maximum number of 31 pulses to excite the sensor, and its frequency can have a range from 31.25 kHz to 4 MHz.

The excitation of the sensor is marked with a START pulse, while the echo is denoted with a STOP pulse. The difference in time between START and STOP time-of-flight (TOF) indicates the fluid level, fluid ID/concentration, and distance.

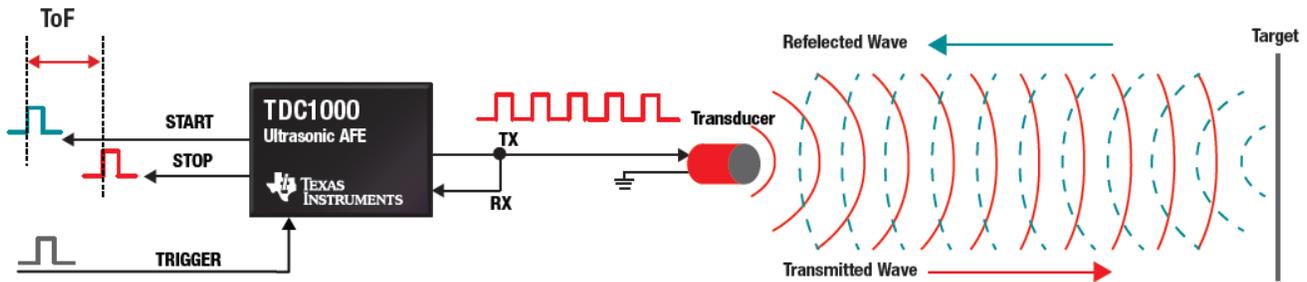


Figure 1. How Ultrasonic Works for Single Transducer Measurement

For dual transducers applications such as flow meter (Figure 2), the TDC1000 AFE utilizes the transducers in a pitch-and-catch fashion. In this method, transducer A is excited by the TDC1000 while transducer B acts as a receiver to generate STOP pulses. The time-of-flight (TOF_{AB}) between excitation and STOP pulses indicates the distance between the transducers. A differential ToF, $TOF_{AB} - TOF_{BA}$, needs to be done to find the flow of medium (water or gas) between the two transducers.

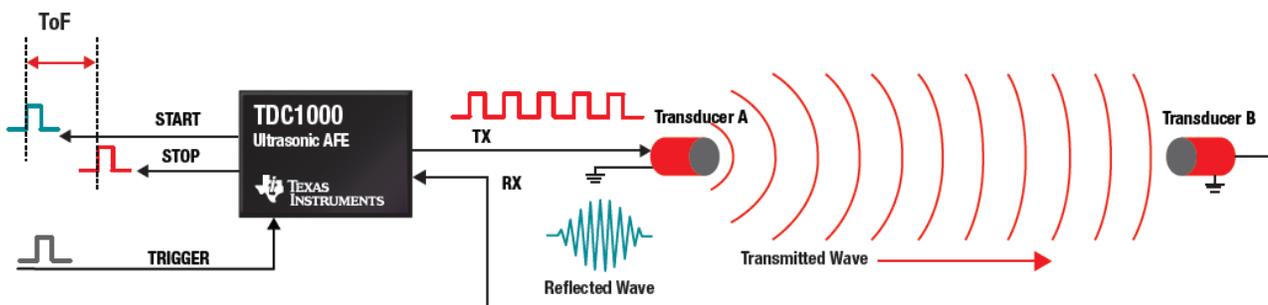


Figure 2. How Ultrasonic Works for Dual Transducer Measurement

Further information on how ultrasonic is used in fluid level sensing, fluid identification, flow metering, and distance sensing applications will be discussed in the next sections.

2 TDC1000: Ultrasonic Analog-Front-End and TDC7200: Time-to-Digital Converter

TI's TDC1000 (Figure 3) is an analog-front-end IC that drives ultrasonic transducers in sensing applications. As the first ultrasonic sensing AFE from TI, the TDC1000 offers a number of key features and benefits, including very low sleeping power and programmable modes that enable the lowest power solutions, boosting battery life for flow meter applications. Along with a companion device, TI's TDC7200 time-to-digital converter (Figure 4), the solution offers high levels of accuracy in the picosecond range for zero and low-flow.

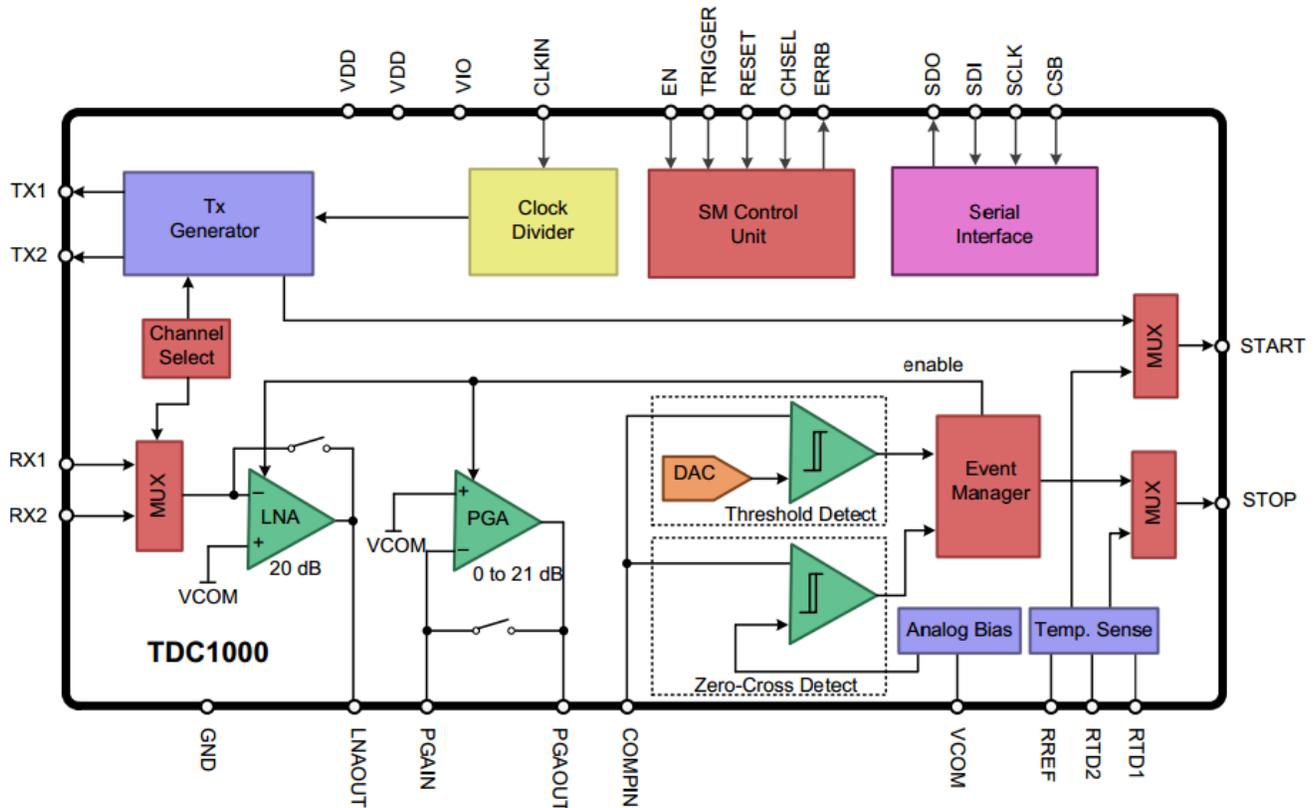


Figure 3. TDC1000 Block Diagram

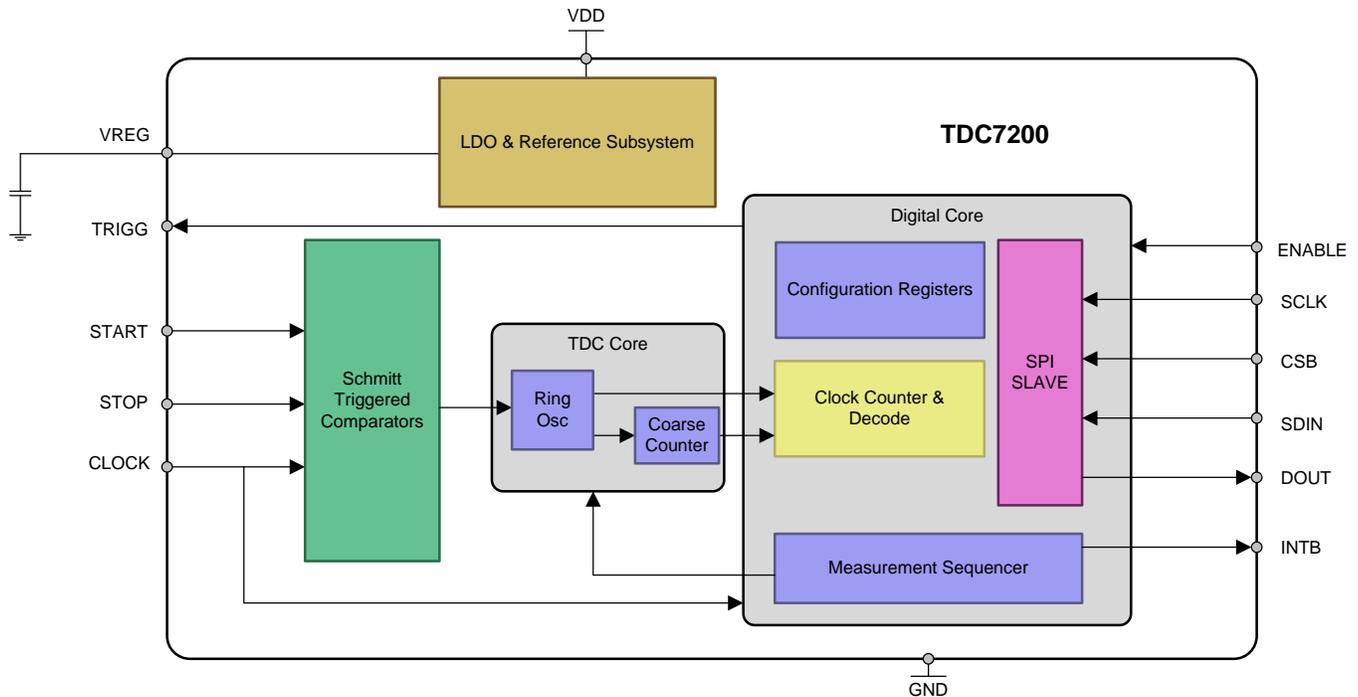


Figure 4. TDC7200 Block Diagram

The TDC1000 gives you flexibility in programming, for multiple transmit pulses, signal thresholds, and gain, to accommodate multiple applications and systems, and varying tank or pipe sizes. And one of the most valuable features that TI provides you is the complete system solution. The TI Designs library gives you complete reference designs that include AFE, TDC, MCU, wireless, power, and source code for easy-to-implement measurement and sensing solutions. One of the TI Designs for ultrasonic is the TIDA-00322, an automotive fluid level/quality measurement using ultrasonic.

3 Application No. 1: Fluid Level

The TDC1000 is ideal for many sensing applications, and some of the most common involve managing fluids. Figure 5 shows a diagram for detecting fluid level in a container. Ultrasonic sensors are mounted on the bottom or top of the tank to determine the level of the fluid.

The TDC1000, ultrasonic AFE, excites the non-intrusive transducer with 1 to 31 pulses. The sensor continuously transmits pulses of high frequencies (typically 1 MHz) into the fluid. Then the TDC1000 reports the time-of-flight (TOF) that the wave takes to transmit to the liquid surface, and reflect back to the sensor. Referencing the speed of sound in the fluid and using the equation $TOF = (2 * \text{fluid level}) / (\text{fluid speed of sound})$, the exact distance of the liquid surface from the sensor can be calculated with high accuracy.

For example, assume that the transducer is mounted at the bottom of a water tank, and the TDC1000 reports a TOF of 1 ms. Knowing that the speed of sound through water is approximately 1480 m/s at 25°C, the fluid level can be calculated as:

$$TOF = (2 * \text{fluid level}) / (\text{fluid speed of sound}) \tag{1}$$

$$\text{Fluid level} = (TOF * \text{fluid speed of sound}) / 2 \tag{2}$$

$$\text{Fluid level} = (1\text{ms} * 1480 \text{ m/s}) / 2 \tag{3}$$

$$\text{Fluid level} = 0.74\text{m} \tag{4}$$

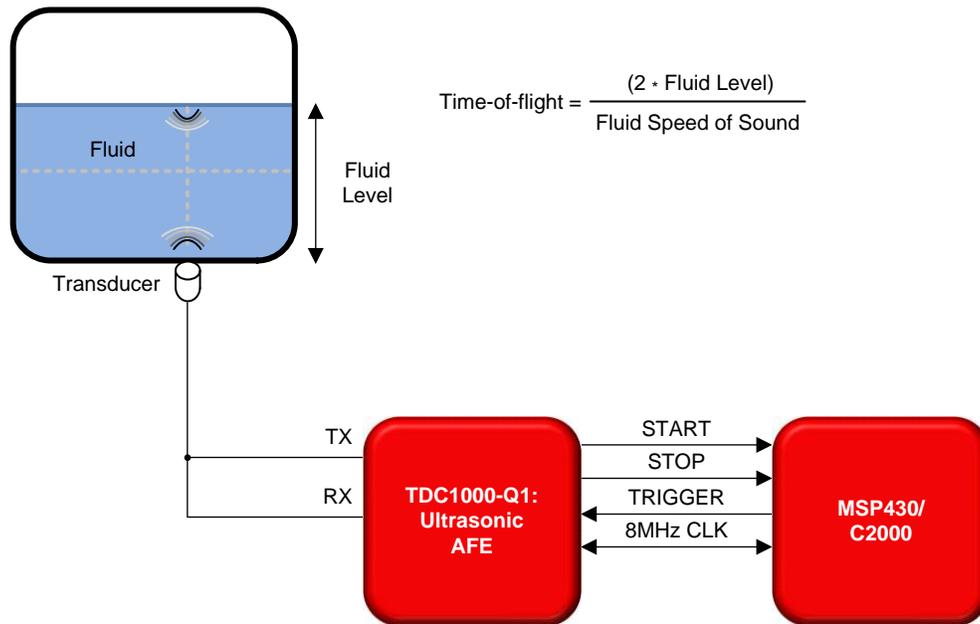


Figure 5. Fluid Level Measurement Using Ultrasonic

For more information on how to select or mount ultrasonic transducers to the outside of a tank, see Application Note: *How to Select and Mount Transducers in Ultrasonic Sensing for Level Sensing*, [SNAA266](http://www.ti.com/SNAA266). In addition to this application note, there are videos, application notes, and other design tools available at <http://www.ti.com/ultrasonic>.

4 Application No. 2: Fluid Identification / Concentration

Now, let's add to that level application, and see how fluid identification (ID) works. Fluid ID is the same as fluid level detection, except that the sensor is typically mounted on the side of the tank, as shown in [Figure 6](#).

Again, the TDC1000 excites the sensor, and then it reports the time the wave takes to transmit and reflect back. Since the exact distance is known, and time-of-flight (TOF) is measured, the speed of sound through the fluid can be calculated, and checked against a look-up-table to identify the fluid.

For example, assume the distance of the tank is 0.1m and TDC1000 reports a TOF of 134µs, we can calculate the fluid speed of sound as:

$$TOF = (2 * distance) / (\text{fluid speed of sound}) \tag{5}$$

$$\text{Fluid speed of sound} = (2 * distance) / (TOF) \tag{6}$$

$$\text{Fluid speed of sound} = (2 * 0.1 \text{ m}) / (134 \mu\text{s}) \tag{7}$$

$$\text{Fluid speed of sound} = 1490 \text{ m/s} \tag{8}$$

Using a [look-up-table](#) and knowing that the temperature is approximately 25°C, we can figure out that the unknown liquid inside the tank is oil.

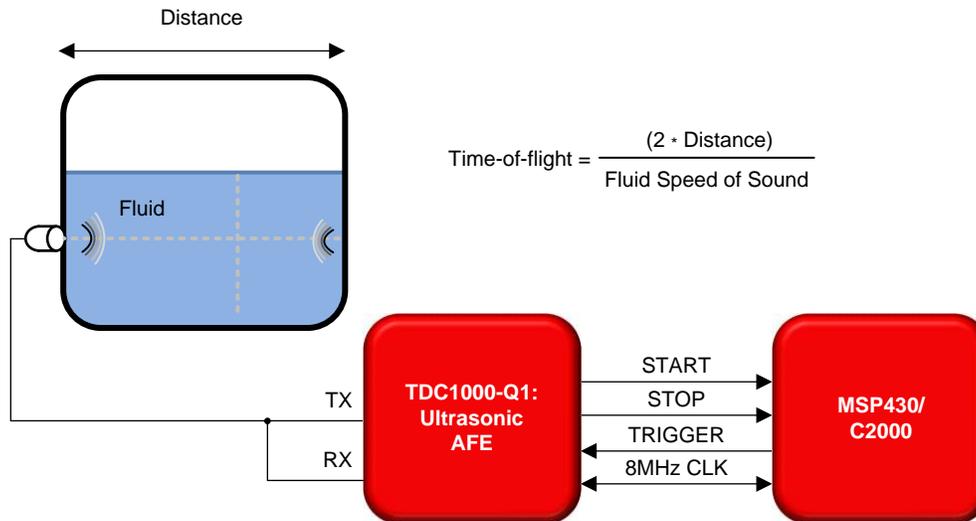


Figure 6. Fluid Identification / Concentration Using Ultrasonic

For more information on performing Fluid Identification or determining Liquid Contamination, see Application Note: *Ultrasonic Sensing for Fluid Identification and Contamination*, [SNAA265](#). In addition to this application note, there are videos, application notes, and other design tools available at <http://www.ti.com/ultrasonic>.

5 Application No. 3: Flow Meter

Another key application – especially in the energy market – is flow metering. For this application, the transducers can be mounted non-intrusively side-by-side (Figure 7), or at opposite angles.

The TDC1000 excites both sensors, and reports the difference of the transit time propagating in – and against – flow direction. Transducer A operates as a transmitter during the upstream cycle and as a receiver during the downstream cycle, and transducer B operates as a receiver during the upstream cycle and as a transmitter during the downstream cycle. An ultrasonic flow meter operates by alternating transmit and receive cycles between the pair of transducers and accurately measuring the time-of-flight (TOF) of both directions.

Accuracy is very important for zero flow measurements, and thus, picosecond time capture is critical. For this reason, the TDC7200 time-to-digital converter is introduced as a stop watch device. Other applications that do not require picosecond accuracy can just use an MCU as the time-to-digital converter.

For example, assume the following parameters are known:

- Diameter of the pipe $D = 5$ cm
- Length between the transducers = 10 cm
- TDC1000 reports a time-of-flight from transducer A to B (TOF_{AB}) as 101.3512 μ s
- TDC1000 reports a time-of-flight from transducer B to A (TOF_{BA}) as 101.3515 μ s
- Water speed of sound $c = 1480$ m/s at 25°C

We can calculate the velocity of the water through the pipe using the following equations:

$$TOF_{AB} = \frac{\left(\frac{D}{2}\right) + L + \left(\frac{D}{2}\right)}{\text{Water speed of sound} + (\text{flow rate})} = \frac{D + L}{c + v} \quad (9)$$

$$TOF_{BA} = \frac{\left(\frac{D}{2}\right) + L + \left(\frac{D}{2}\right)}{\text{Water speed of sound} - (\text{flow rate})} = \frac{D + L}{c - v} \quad (10)$$

$$\Delta TOF = (TOF_{BA}) - (TOF_{AB}) \quad (11)$$

$$v = \frac{\Delta TOF \times c^2}{2 \times (D + L)} \quad (12)$$

$$v = \frac{(101.3515 \mu\text{s} - 101.3512 \mu\text{s}) \times \left(1480 \frac{\text{m}}{\text{s}}\right)^2}{2 \times (0.05 \text{ m} + 0.1 \text{ m})} \quad (13)$$

$$v = \text{flow rate} = 2.1904 \text{ mm/sec} \quad (14)$$

We can convert this velocity to liter per hour (l/h) using the following equations:

$$\text{Flow rate} \left(\frac{\text{l}}{\text{h}}\right) = \left(\text{flow rate} \frac{\text{m}}{\text{sec}}\right) \times \left(\frac{3600 \text{ second}}{\text{hour}}\right) \times \left(\pi \left(\frac{D}{2}\right)^2\right) \left(\frac{1 \text{ liter}}{10^{-3} \text{ m}^3}\right) \quad (15)$$

$$\text{Flow rate} \left(\frac{\text{l}}{\text{h}}\right) = \left(2.1904 \times 10^{-3} \frac{\text{m}}{\text{sec}}\right) \times \left(\frac{3600 \text{ second}}{\text{hour}}\right) \times \left(\pi \left(\frac{0.05}{2}\right)^2\right) \left(\frac{1 \text{ liter}}{10^{-3} \text{ m}^3}\right) \quad (16)$$

$$\text{Flow rate} \left(\frac{\text{l}}{\text{h}}\right) = 15.5 \frac{\text{liter}}{\text{hour}} \quad (17)$$

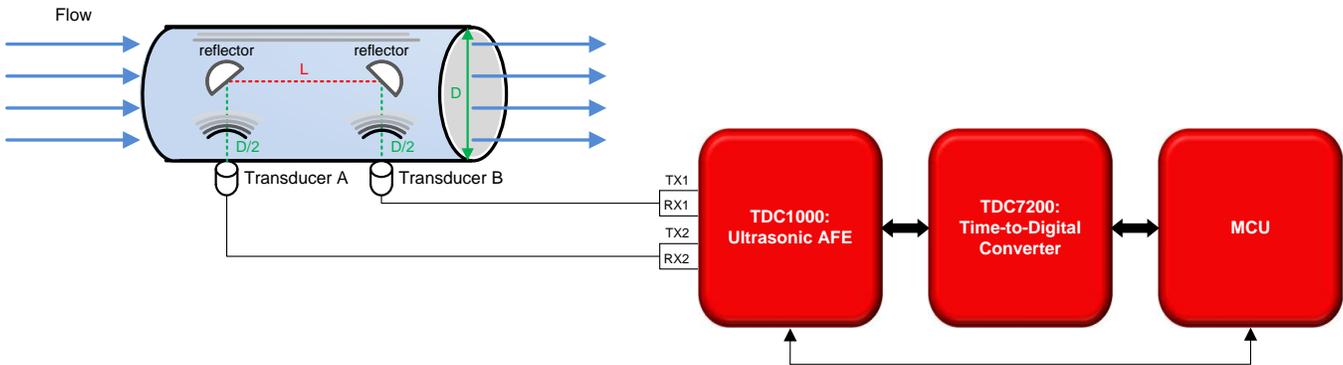


Figure 7. Flow Meter Using Ultrasonic

For more information on Water Flow Sensing, see Application Note: *Ultrasonic Sensing for Water Flow Meters and Heat Meters*, [SNIA020](#). In addition to this application note, there are videos, application notes, and other design tools available at <http://www.ti.com/ultrasonic>.

6 Application No. 4: Distance/Proximity Sensing

Figure 8 shows one more example of ultrasonic sensing that's very popular - proximity and distance sensing. The concept for this application is the same as fluid level detection, but now we are measuring in air instead of fluid.

For this application space, there are two devices from Texas Instruments to consider. The operating principles of each device (TDC1000 and PGA450) are similar but each has its unique advantages. In short, the TDC1000 is best for detecting objects at shorter distances with higher levels of accuracy (better than 1cm) while the PGA450 is excellent for detecting objects with cm accuracy at multiple meters. Again, the TDC1000 and PGA450 AFEs excite the sensor, which then transmits high frequencies – typically 40 kHz - into air. The transmitted wave hits the target object, then returns to the sensor, and the TDC1000 then reports this time-of-flight, and distance can be calculated.

For example, assume the TDC1000 reports a TOF of 2 ms, and knowing that the speed of sound through air at 25°C is approximately 346 m/s, the distance of the object can be calculated as:

$$\text{TOF} = (2 \cdot \text{distance}) / (\text{air speed of sound}) \tag{18}$$

$$\text{Distance} = (\text{TOF} \cdot \text{air speed of sound}) / 2 \tag{19}$$

$$\text{Distance} = (2\text{ms} \cdot 346 \text{ m/s}) / 2 \tag{20}$$

$$\text{Distance} = 0.346 \text{ m} \tag{21}$$

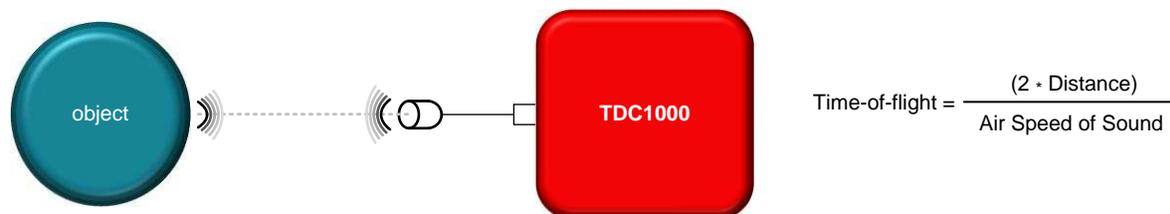


Figure 8. Proximity/Distance Sensing Using Ultrasonic

7 Conclusion

Fluid level sensing, fluid identification, flow metering, and distance sensing are just some of the applications where the TDC family and other technology from TI can bring you the complete flexible solution with high accuracy and far less power consumption in sensor solutions. See <http://www.ti.com/product/tdc1000> and <http://www.ti.com/ultrasonic> for product information, including reference designs, evaluation modules, online design tools, and other resources from TI.

Revision History

Changes from Original (March 2015) to A Revision	Page
• Added paragraph to the <i>ABSTRACT</i> section, " <i>This application note provides an introduction...</i> ".....	1
• Moved and renamed Section 2 <i>How Ultrasonic Works To</i> : Section 1 <i>General Theory of How Ultrasonic Sensing Works</i> .	2
• Added text and URL link " <i>For more information...</i> " following Figure 5	5
• Added text and URL link " <i>For more information...</i> " following Figure 6	6
• Added text and URL link " <i>For more information...</i> " following Figure 7	8
• Added URL link to the ultrasonic web page in Section 7	8

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have **not** been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

Products

Audio	www.ti.com/audio
Amplifiers	amplifier.ti.com
Data Converters	dataconverter.ti.com
DLP® Products	www.dlp.com
DSP	dsp.ti.com
Clocks and Timers	www.ti.com/clocks
Interface	interface.ti.com
Logic	logic.ti.com
Power Mgmt	power.ti.com
Microcontrollers	microcontroller.ti.com
RFID	www.ti-rfid.com
OMAP Applications Processors	www.ti.com/omap
Wireless Connectivity	www.ti.com/wirelessconnectivity

Applications

Automotive and Transportation	www.ti.com/automotive
Communications and Telecom	www.ti.com/communications
Computers and Peripherals	www.ti.com/computers
Consumer Electronics	www.ti.com/consumer-apps
Energy and Lighting	www.ti.com/energy
Industrial	www.ti.com/industrial
Medical	www.ti.com/medical
Security	www.ti.com/security
Space, Avionics and Defense	www.ti.com/space-avionics-defense
Video and Imaging	www.ti.com/video

TI E2E Community

e2e.ti.com